

## STARTING SYSTEM

### SENDERS, SENSORS AND SWITCHES

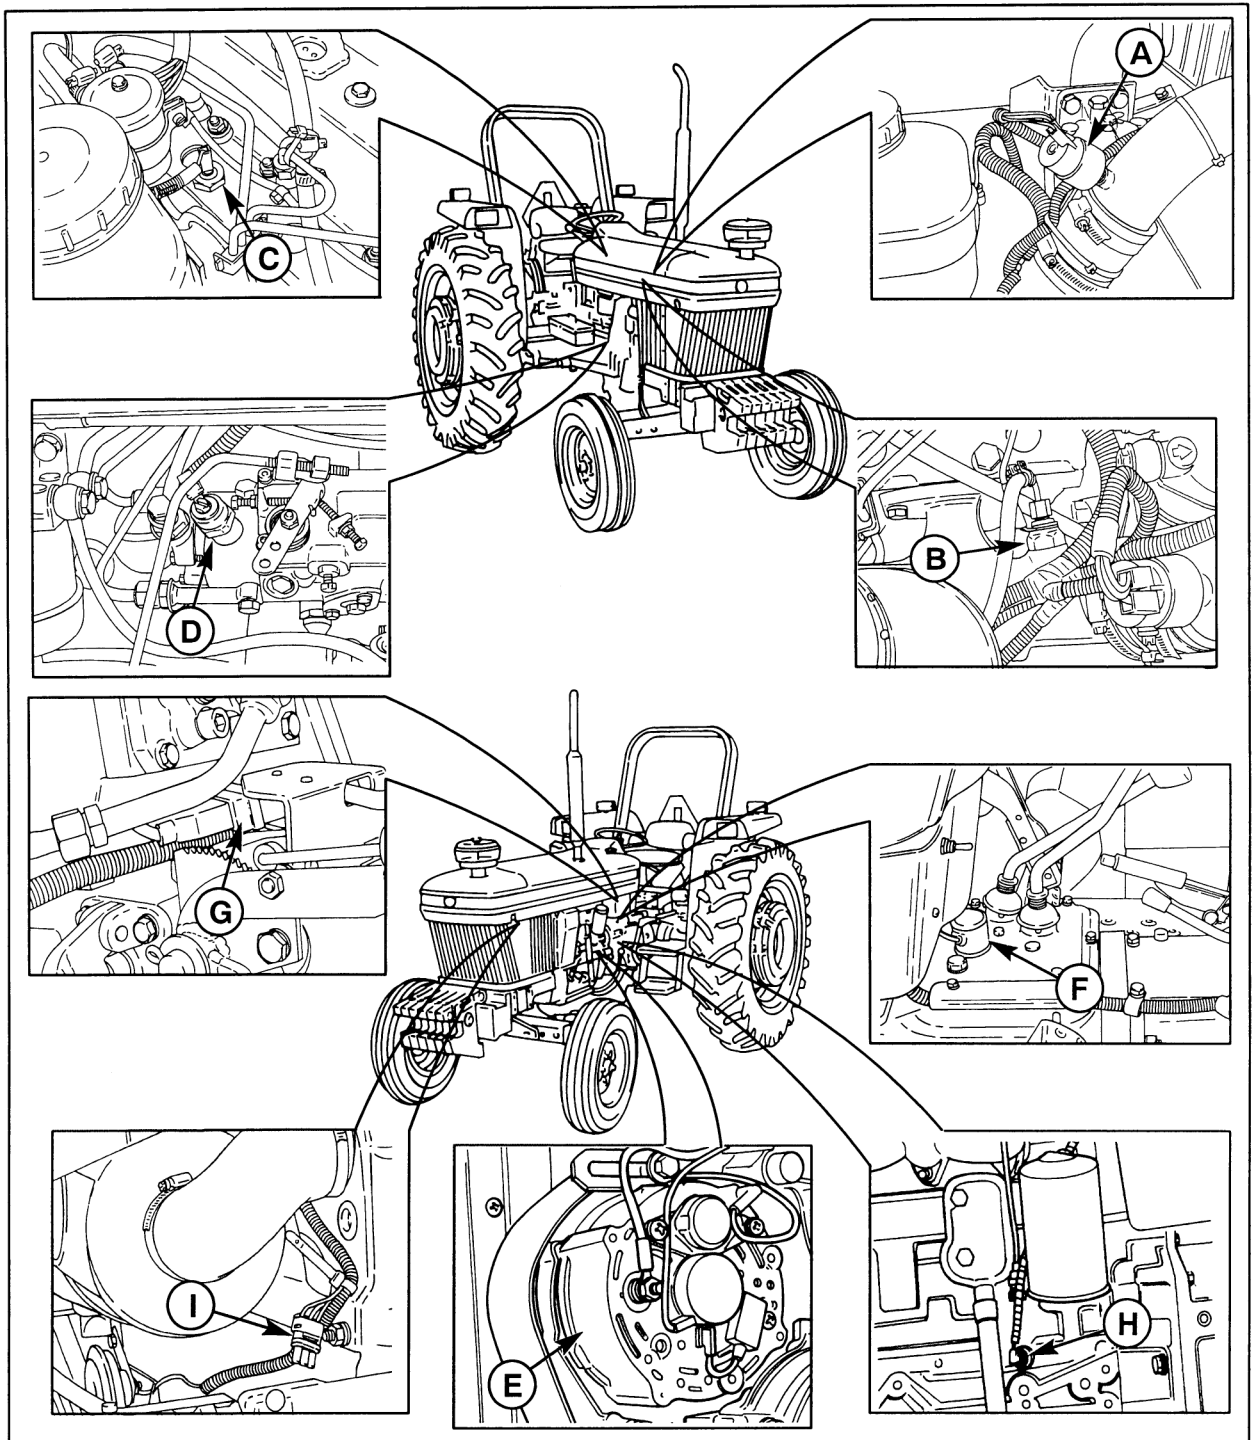


FIGURE 2-12

### ELECTRICAL COMPONENTS

#### Right Side

- A. Dry Air Cleaner Clogged Sensor
- B. Thermostart®
- C. Engine Coolant Temperature Sensor
- D. Engine Stop Solenoid

#### Left Side

- E. Alternator
- F. Transmission Range Selector Neutral Start Switch
- G. PTO Selection Neutral Start Switch
- H. Engine Oil Pressure Sensor
- I. Auxiliary Light Connector